

DECLARATION UNDER 37 CFR 1.131

We, Wojtek Przytula and Denver Dash, hereby declare that **we conceived the subject matter of Patent Application No. 10/692,697 at least as early as the date of March 4, 2002, and by acts undertaken wholly in the United States of America, have diligently pursued this invention with the purpose of its actual reduction to practice on September 13, 2002, and thereafter until the filing date of October 23, 2003.**

The invention that is the subject of this patent application was captured in an Invention Disclosure, included herewith as Appendix A. Referring to Appendix A, as noted on sheet 2, section 3, I declare that we first completed a conception of the invention by March 4, 2002. As noted on sheet 2, section 4, we thereafter diligently pursued the invention until its actual reduction to practice on September 13, 2002, and thereafter until the filing date of October 23, 2003. Evidence of the actual reduction to practice can be found on sheet 17, which includes a description of an implementation of the present invention, including experimental results.

As noted on sheet 2, sections 6 and 7, at the time of preparing the invention disclosure, we were unaware of any publications or public presentations related to the invention.

The invention disclosure (i.e., Appendix A) provides support for the subject matter in all of the claims of Patent Application No. 10/692,697.

For example, independent Claim 1 discloses a method for automatically evaluating Bayesian network models for decision support. Claim 1 includes an act of receiving a Bayesian Network (BN) model including evidence nodes and conclusion nodes, where the conclusion nodes are linked with the evidence nodes by causal dependency links, and where the evidence nodes have evidence states and the conclusion nodes have conclusion states. This corresponds to the description of the BN model on page 8. The relevant portion of the invention disclosure (Appendix A) states that “the invention is a method

for evaluation of the Bayesian Network (BN) model and the decision domain” (referring to page 8, lines 1 to 2 of the invention disclosure). Thus, a Bayesian Network consists of evidence nodes, also known as observation nodes (nodes whose state can be observed to obtain evidence), and conclusion nodes, also known as failure nodes (nodes whose resulting state reflects either failure or success).

Claim 1 also includes an act of setting the states of the conclusion nodes (referred to as ‘failure nodes’ on the invention disclosure) to desired conclusion states and determining, by propagating down the causal dependency links, a corresponding probability of occurrence of evidence states of the evidence nodes (referred to as ‘observation nodes’ on the invention disclosure) and producing, from the probability of occurrence, a plurality of samples of most likely states of the evidence nodes (referred to as ‘observation nodes’ on the invention disclosure).” This corresponds to the Failure propagation step disclosed by the invention disclosure on page 8, lines 16 to 25. Specifically, the invention disclosure states (referring to page 8, lines 16 to 25) that “in failure propagation step we perform the following computation steps: (a) select one or more specific failures (this corresponds in Claim 1 “to select desired conclusion state”); (b) in the BN we set the states of nodes representing the failures to defective and set the states of the remaining failure nodes that are the root nodes of the BN to the state non-defective (this corresponds in Claim 1 to “setting the states of the conclusion nodes, failure nodes, to desired conclusion states”); (c) determine the state of the remaining nodes using Monte Carlo simulation, find the next node in the list of temporally ordered nodes, and using BN inference, calculate the posterior distribution of that node (evidence node) given the evidence so far (this corresponds in Claim 1 to “determining, by propagating down the causal dependency links, a corresponding probability of occurrence of evidence states of the evidence nodes”); and (d) determine the state of the node by Monte Carlo sampling of its posterior distribution and stop when states of all nodes (evidence nodes) have been determined (this corresponds in Claim 1 to “producing, from the probability of occurrence, a plurality of samples of most likely states of the evidence nodes”).

Furthermore, Claim 1 claims “setting the states of the evidence nodes to states corresponding to the plurality of samples of the evidence states, and propagating the evidence states back up the causal dependency links to the conclusion nodes, to obtain a plurality of probabilities of the resulting states of the conclusion nodes.” This corresponds to the “diagnosis step” disclosed by the invention disclosure on page 8, lines 26 to 30. Specifically, the invention disclosure states (referring to page 8, lines 26 to 30) that the failure propagation step is followed by a diagnosis step, wherein the diagnosis step consists of the following computation steps: (a) assume the states of all the observation nodes (evidence nodes) to be those determined in the failure propagation step (this corresponds in Claim 1 to “setting the states of the evidence nodes (observation nodes) to states corresponding to the plurality of samples of the evidence states”); and (b) compute posterior probability for all the failure nodes, not only the nodes selected as “defective” in the failure propagation step, given the states of the observation nodes (evidence nodes) (this corresponds in Claim 1 to “propagating the evidence states back up the causal dependency links to the conclusion nodes or failure nodes, to obtain a plurality of probabilities of the resulting states of the conclusion nodes or failure nodes”).


In addition, independent Claim 1 discloses “outputting a representation of the plurality of the probabilities of the states of the conclusion nodes.” This corresponds to the “visualization step” disclosed by the invention disclosure on page 9, lines 1 to 22. Specifically, the invention disclosure states (referring to page 9, lines 1 to 4) that the failure propagation step and the diagnosis step are followed by a third step, the visualization step, which is performed when all the computations for the first two steps are completed. The invention disclosure further states that there are two outputs produced by the visualization step complete graph for failure probabilities, and 2D and 3D matrices of averaged failure probabilities (this corresponds in Claim 1 to “outputting a representation of the plurality of the probabilities of the states of the conclusion nodes”). Additionally, the invention disclosure clearly presents graphs and plots (referring to pages 12 through 16 of the invention disclosure) illustrating the results obtained with a software implementation of the present invention, which clearly

correspond to “outputting a representation of the plurality of the probabilities of the states of the conclusion nodes,” as disclosed by Claim 1.

Regarding the Independent Claims 18, 35, and 52, these claims disclose limitations, in a similar manner as Claim 1, that directly correspond to the “failure propagation, diagnosis, and visualization steps” as described in the invention disclosure. Therefore, the invention disclosure (i.e., Appendix A) provides support for each and every one of the claims in Patent Application No. 10/692,697.

We hereby declare that all statements made herein of my own knowledge are true and that all statements made on information and belief are believed to be true; and further that these statements were made with the knowledge that willful false statements and the like so made are punishable by fine or imprisonment, or both, under 18 U.S.C. 1001 and that such willful false statements may jeopardize the validity of the application or any patent issued thereon.

	<u>January 28, 2008</u>
Wojtek Przytula	Date

	<u>January 28, 2008</u>
Denver Dash	Date

TECHNOLOGY INFORMATION OFFICE
ATTN: Joy Pavlow, MS RL55
HRL LABORATORIES, LLC
Telephone No. - 5734


HRL PROPRIETARY AND SENSITIVE
(when completed)

INVENTION DISCLOSURE

THIS INVENTION DISCLOSURE IS MADE PURSUANT TO MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC



1 of 17

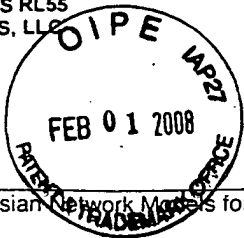

1. TITLE

Evaluation of Bayesian Network Models for Decision Support

2. INVENTOR(S)

[illegible]

LOSS OF RIGHTS THROUGH RELEASE TO THE PUBLIC

The right to apply for and obtain a valid patent may be lost as the result of certain activities, such as (1) disclosing the invention outside of the company without an appropriate confidentiality agreement with the receiving party; (2) disclosing the invention publicly by publication in a journal, presentation, magazine or otherwise; (3) using the invention publicly; (4) using the invention privately to build or test items that are to be sold publicly; or (5) putting the invention "on sale" by selling or offering for sale an item or product that embodies or uses the invention, or is made or tested by use of the invention. Submitting a proposal with the intent to use the invention in the performance of a resulting contract puts the invention "on sale".

Please inform the HRL General Counsel immediately of any of these activities or any plans to undertake any of them.

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

INVENTION DOCKET NO.

RECEIVED
HRL LABORATORIES, LLC

SEP 23 2002

020905

Rev 051701



INVENTION DISCLOSURE

THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC

3. PROOF OF CONCEPTION ALL EVIDENCE OF CONCEPTION (FIRST DRAWING AND FIRST WRITTEN DESCRIPTION) AND EVIDENCE OF REDUCTION TO PRACTICE (DEVICE EMBODYING THE INVENTION AND TEST DATA) MUST BE RETAINED.

A BY WHOM WAS FIRST DESCRIPTION WRITTEN OR DRAWING MADE? Krzysztof W. Przytula	DATE 3/4/2002	TIME SPENT 40 hours	ACCT. CHARGED CD02203	LOCATION OF FIRST DESCRIPTION/DRAWING HRL Laboratories, Bldg 254, Room 4G26
B TO WHOM WAS INVENTION FIRST DISCLOSED? Denver Dash				DATE 3/25/2002

4. REDUCTION TO PRACTICE

A WAS A DEVICE EMBODYING THE INVENTION CONSTRUCTED AND TESTED OR THE PROCESS PRACTICED? <input checked="" type="radio"/> Yes <input type="radio"/> No	BY WHOM Denver Dash	DATE STARTED 3/28/2002	DATE COMPLETED 09/13/2002	TIME SPENT 40 hours
B ACCOUNT CHARGED - TIME CD02203	ACCOUNT CHARGED - MATERIAL		PRESENT LOCATION OF DEVICE HRL, Bldg 254, Room 4G26	
C PRESENT LOCATION OF DOCUMENTS (DATE SIGNED AND WITNESSED), INCLUDING PHOTOS, DRAWINGS, AND DATA SHEETS SHOWING REDUCTION TO PRACTICE HRL, Bldg 254, 4G26				

5. RELATION TO GOVERNMENT CONTRACT


A DOES THIS INVENTION RELATE TO WORK PERFORMED UNDER A GOVERNMENT CONTRACT? <input type="radio"/> Yes <input checked="" type="radio"/> No	CONTRACT NUMBER AND TITLE
B EXPLAIN HOW THIS INVENTION RELATES TO A GOVERNMENT CONTRACT.	
C IS INVENTION BEING USED ON A GOVERNMENT CONTRACT? <input type="radio"/> Yes <input checked="" type="radio"/> No	CONTRACT NUMBER AND TITLE

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION

SIGNATURE OF INVENTOR <i>[Signature]</i>	DATE 09/17/02	SIGNATURE OF INVENTOR <i>[Signature]</i>	DATE 9/19/02	<div>INVENTION SOCKET NO. HRL LABORATORIES, LLC</div> <div>SEP 23 2002</div> <div>020905</div>	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE		
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE		
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE		
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE		
READ AND UNDERSTOOD BY:					
WITNESS NAME (TYPE) SRINIVASA	SIGNATURE <i>[Signature]</i>	DATE 9/18/02	WITNESS NAME (TYPE) DAVID SHU	SIGNATURE <i>[Signature]</i>	DATE 9/17/02

TECHNOLOGY INFORMATION OFFICE
ATTN: Joy Pavlow, MS RL55
HRL LABORATORIES, LLC
Telephone No. - 5734

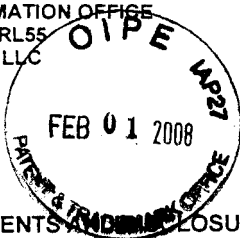

HRL PROPRIETARY AND SENSITIVE
(when completed)

INVENTION DISCLOSURE

THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC



3 of 17

6. RELATED DOCUMENTS AND DISCLOSURES (BY YOU OR BY ANOTHER). PLEASE ATTACH COPY.

A IS THERE A PUBLICATION OR PUBLIC PRESENTATION RELATED TO THE INVENTION?	<input type="radio"/> Yes <input checked="" type="radio"/> No	DATE	IDENTIFY
B ARE THERE ANY RELATED INVENTION DISCLOSURES OR PATENT APPLICATIONS?	<input type="radio"/> Yes <input checked="" type="radio"/> No	DATE	IDENTIFY PD NO. ETC.
C ARE THERE ANY PROPOSALS OR REPORTS OR OTHER DOCUMENTS RELATING TO THIS INVENTION?	<input type="radio"/> Yes <input checked="" type="radio"/> No	DATE	IDENTIFY
D HAS THE INVENTION BEEN USED INSIDE OR OUTSIDE THE COMPANY, OR DISCUSSED, DEMONSTRATED, OR OTHERWISE DISCLOSED OUTSIDE THE COMPANY (SUCH AS TO A VENDOR OR CUSTOMER?)	<input type="radio"/> Yes <input checked="" type="radio"/> No	DATE	TO/FOR WHOM (COMPANY/PERSON)

7. SALE

A HAS PRODUCT EMBODYING INVENTION OR MADE BY INVENTION BEEN PROPOSED, SOLD, OR OFFERED FOR SALE?	<input type="radio"/> Yes <input checked="" type="radio"/> No	ORDER NO.	ORDER DATE	DELIVERY DATE	DATE OFFERED OR PROPOSED
B IS PRODUCT EMBODYING INVENTION OR MADE BY INVENTION IN A DELIVERABLE ITEM?	<input type="radio"/> Yes <input checked="" type="radio"/> No	DELIVERY DATE			

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR <i>David Shu</i>	DATE 09/17/02	SIGNATURE OF INVENTOR <i>David Shu</i>	DATE 9/19/02
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE


INVENTION DOCKET NO.
HRL LABORATORIES, LLC

SEP 23 2002

020205

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE) N. Srinivasan	SIGNATURE <i>N. Srinivasan</i>	DATE 9/17/02	WITNESS NAME (TYPE) DAVID Shu	SIGNATURE <i>David Shu</i>	DATE 9/19/02
--------------------------------------	-----------------------------------	-----------------	----------------------------------	-------------------------------	-----------------

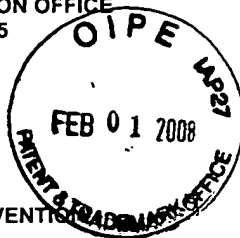

HRL B5

8. SUMMARY OF THE INVENTION

- A. GIVE A BRIEF DESCRIPTION OF YOUR INVENTION, PARTICULARLY POINTING OUT WHAT IS BELIEVED TO BE NOVEL (THE "HEART" OF WHAT IS NEW).

Bayesian networks (BN), known also as belief networks, models are graphical probabilistic models that result from combining graph and probability theories. They are used to model decision support problems. The BN models can be created using information obtained from experts, from design documentation, and from data. They can also be learned entirely from data. We describe a method and software for evaluation of BN models for decision support. The method applies to all BNs independent of the way in which they were created. It provides a systematic approach to evaluating the performance of BN. In our examples we will apply our method to BN for diagnostics, however the method is applicable to BN models used for any decision support problem.

Before BN models can be used as decision support aids, they have to be extensively evaluated. A typical evaluation relies on comparing the answers suggested by the BN models with those expected by the experts. The evaluation is limited to a relatively small number of decision cases, for which the experts know the correct answer. We have developed a systematic approach to evaluation of BN and implemented it in a software tool. The tool takes in a BN model and produces graphs characterizing the model performance. We have also developed a method for interpreting the graphs to identify the parts of the BN models, which are responsible for inadequate performance. Our technique also provides a way to analyze the domain being modeled to discover how well the domain lends itself to accurate decision making.

We are not aware any other systematic method and software that addresses the problem of either Bayesian model or domain evaluation.

- B. EXPLAIN THE PURPOSE AND ADVANTAGES OF YOUR INVENTION. (WHAT WILL THE INVENTION DO BETTER THAN DONE PREVIOUSLY?)

A conventional evaluation of BN models is based on a limited ad hoc testing. First, a set of cases is identified for which a correct decision is known. The cases may come from the data or from the expert. Then, the BN is queried for decision recommendations based on the cases. The quality of the BN model is determined on the basis of the recommendations produced by the model for the cases. The number of the cases is usually very limited and their selection is driven by their availability rather than proper coverage of the decision domain. The conventional evaluation is almost always incomplete and therefore unreliable.

Our approach provides for a complete and informative evaluation of the BN for decision support. It is a completely automated and exhaustive evaluation. It informs the user about the expected performance of the

HRL PROPRIETARY AND SENSITIVE (when completed)


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)		SIGNATURE		DATE		WITNESS NAME (TYPE)		SIGNATURE		DATE	

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

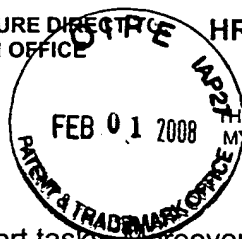

model in decision support tasks. Moreover, it points to the parts of the model which are responsible for errors in suggested decisions and helps in identifying changes of the model that could improve its performance.

Our approach to BN evaluation shortens the time from design to practical application of decision support tools. It also provides a solid basis for estimating the performance of the tools before they are released for use.

8. SUMMARY OF THE INVENTION (Continued)

- C. IDENTIFY THE COMPANY OR OWNER PROGRAM OR PRODUCT LINE TO WHICH THE INVENTION APPLIES, AND THE EXPECTED VALUE TO THE PROGRAM OR PRODUCT LINE. ALSO IDENTIFY POTENTIAL COMMERCIAL APPLICATION OF THIS INVENTION, IF ANY.

The invention will be very beneficial to all the divisions that at present use decision support tools based on BN. We are aware of use of such at GM Electromotive Division, Boeing Phantom Works, Boeing Satellite Systems. We know of plans to use BN models at GM Service, Boeing Commercial Airplane Divisions and Boeing Defense Divisions. BN models have been also used in several programs of US Government (e.g. Darpa Knowledge Data Bases, etc)

The software tool, which implements the evaluation algorithm, could be licensed to other companies.

- D. IDENTIFY THE PRIOR ART KNOWN TO YOU WHICH IS IMPROVED UPON OR DISPLACED BY YOUR INVENTION, AND STATE IN DETAIL, IF KNOWN, THE DISADVANTAGES OF THE CLOSEST PRIOR ART.

D. Heckerman, J.S. Breese, K. Rommlese "Decision-Theoretic Troubleshooting," Communications of ACM, March 1995, Vol. 38, No. 3, pp. 49-57

The paper describes planning of test and repair sequences for cost-optimal troubleshooting. The systems undergoing troubleshooting are modeled using BN. The focus of the paper is on finding the ordering of test and repair steps that results in minimal cost of troubleshooting. The common aspect of our invention and the work described in the paper is a use of Monte Carlo methods. They are applied in the paper to generate test examples from the BN. The examples are the basis of comparison of the author's planning method and other methods known in the literature. The Monte Carlo methods are not used to evaluate the BN model.

D. Heckerman, D. Geiger, D.M. Chickering "Generating Improved Belief Networks" US Patent 5,802,256 September 1, 1998

The patent describes a method for creating BN models for decision support problems from expert knowledge and from data. The contribution of the authors is in integrating the two sources of information to obtain a model of better performance than that originating from data or expert knowledge only. The BN is created using a software

HRL PROPRIETARY AND SENSITIVE (when completed)


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)		SIGNATURE		DATE		WITNESS NAME (TYPE)		SIGNATURE		DATE	

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

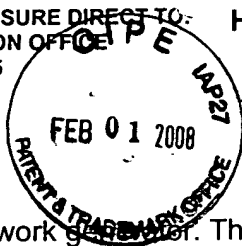

INVENTION DISCLOSURE

THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC



tool referred to as network generator. The patent does not discuss the evaluation of the BN obtained from the generator.

- E. IF PRIOR ART EXISTS, EXPLAIN WHY YOUR INVENTION IS NOT OBVIOUS IN LIGHT OF THE PRIOR ART. CONSIDER SUCH FACTORS AS UNEXPECTED RESULTS, COMMERCIAL SUCCESS OF THE INVENTION, A LONG-FELT NEED THAT IS SATISFIED BY THIS INVENTION, FAILURE OF OTHERS WHO HAVE TRIED TO MAKE THIS INVENTION OR SATISFY THE NEED, COPYING OF YOUR INVENTION BY OTHERS, LICENSING OF YOUR INVENTION AND SKEPTICISM BY THOSE EXPERT IN THE TECHNICAL FIELD OF THE INVENTION ABOUT THE FEASIBILITY OF THE INVENTION.

The invention addresses a very important need faced by all those who use BN in real-life decision support problems. The BN models designed for critical decision support problems, e.g. diagnostics, are very complex and need to be very carefully evaluated before they can be used in practice. The only feasible way to accomplish it is to use some automated evaluation method, which covers all the parts of the model and all the most probable decision cases. Our invention proposes such a method. We are not aware of any other method and software that can accomplish it.

The two examples of prior art mentioned in Section D come closest to our invention, but they do not address the very problem of model evaluation. The "Decision-Theoretic Troubleshooting" paper mentions briefly an algorithm for comparison of planning methods for troubleshooting. Only an outline of the algorithm is presented in the paper. The algorithm belongs to a class of Monte Carlo methods. In our evaluation method we also use an algorithm of the Monte Carlo class to implement a part of our processing. There are some similarities between the algorithms, but there are also significant differences. A detailed comparison is however impossible because of lack of detailed algorithm description in the paper.

The "Generating Improved Belief Networks" patent describes a method for creation of BN. The method is claimed to produce better networks than ad hoc methods. The expected improvements are justified by the construction method. The patent does not describe a separate evaluation step. Our invention can be used for evaluation of the networks created using the method from the patent.

While the detailed implementation of our invention is complex, the concept can be copied, hence the need to protect it with a patent.

9. DETAILED DESCRIPTION

DESCRIBE YOUR INVENTION IN DETAIL, EXPLAINING THE STRUCTURE OF THE APPARATUS OR DEVICE, INCLUDING MATERIALS USED, SIZES AND DIMENSIONS AND HOW COMPONENTS ARE CONNECTED AND EXPLAINING THE METHOD OF PERFORMING THE INVENTION, INCLUDING EACH OF THE STEPS NEEDED TO COMPLETE THE METHOD. MULTIPLE EMBODIMENTS OF THE INVENTION

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.


SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)		SIGNATURE		DATE		WITNESS NAME (TYPE)		SIGNATURE		DATE	

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

SEND COMPLETED DISCLOSURE DIRECT TO:
 TECHNOLOGY INFORMATION OFFICE
 ATTN: Joy Pavlow, MS RL55
 HRL LABORATORIES, LLC
 Telephone No - 5734

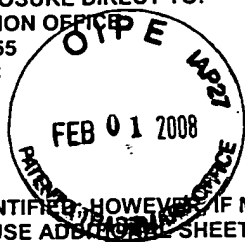

HRL PROPRIETARY AND SENSITIVE
 (when completed)
INVENTION DISCLOSURE
 THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
 MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC



SHOULD BE IDENTIFIED, HOWEVER, IF MORE THAN ONE EMBODIMENT IS DISCLOSED, IDENTIFY WHICH IS THE PREFERRED EMBODIMENT. USE ADDITIONAL SHEETS AS NECESSARY.

A. BE SURE THAT EACH SHEET IS DATED, AND SIGNED BY EACH INVENTOR AND TWO WITNESSES.

The subject of our invention is a method and software tool for analysis of Bayesian Network (BN) models for decision support. We assume that the BN meet all the classic assumptions of BN with discrete, continuous or mixed distributions, as described in standard textbooks of the field [1]. The limitation of the domain to decision support means only that some of the BN nodes are designated as target nodes, and some as observation nodes.

Let us use a specific decision support application as an illustration for our method and software. A system failure diagnostics is one of the most common applications of BN. The technician is asked to make a decision about which components to repair given some observations of the system. The software tool is supposed to assist the technician in the task. It does it by using the BN model of the system failures and observations. In the BN model the target nodes are all the nodes representing the system failures that need to be diagnosed. The observation nodes are all the nodes that model symptoms and test results. During diagnosis we obtain the state information for some of these nodes e.g. we know that some symptoms are present or absent and that some tests have passed or failed. The decision support tool for diagnosis will produce the probability of the system failures. Knowing the probability, the user will decide which components to repair.

The decision support applications based on BN use authoring tools and libraries of probabilistic algorithms. There are several such tools and libraries available as off-the-shelf software, e.g. Hugin, Netica, or as freeware/shareware e.g. MSBN or GeNIe. A discussion of the BN authoring tools and libraries is not part of the invention. Our method is independent of the specific tools and holds for BN created in any one of them. However, our software assumes BN models created according to the Hugin, Netica or GeNIe format.

Let us consider an example of a diagnostic problem – simplified car diagnosis. We have seven car component failures and eight observations. Let us assume that we have created somehow a BN capturing the dependencies between the failures and observations, figure 1. The failure nodes are depicted as blue nodes, the observations as yellow nodes. There are also two white nodes representing auxiliary nodes, which are used for the sake of model clarity. The links between the nodes signify the causal dependencies between components of the model. In general, our technique does not require a causal model, but if causal links are not known then our technique requires knowledge of a total temporal ordering of the variables. In the case of a causal model, the total temporal ordering can be found by performing a topological sort of the network (i.e., ordering the nodes such that if node A is a parent of node B then A comes before B in the ordering). The figure shows only the structure of the model. All the nodes have also numerical parameters in form of probabilities: prior for root nodes and conditional for all the remaining nodes.

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

				INVENTION DOCKET NO.
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	


READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

INVENTION DISCLOSURE

THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC

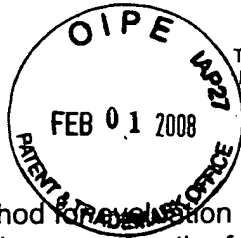

Our invention is a method for propagation of the BN model and the decision domain. The method provides information that helps in answering the following two questions:

- (1) "How good is the model as a diagnostic assistant?" This question can be further broken down into two sub-questions: (a) "How closely does the model reflect reality?" and (b) "Given that the model perfectly reflects reality, how does the domain being modeled lend itself to correct diagnosis?"
- (2) "Which nodes/parameters are responsible for ambiguous or incorrect diagnostic suggestions?" This question can also be broken down into two components: (a) "Which nodes/parameters are being incorrectly modeled?", and (b) "Given that the model perfectly reflects reality, which variables in the real world can not be resolved given the observations being modeled?"

The evaluation is implemented using an algorithm, which has three basic steps:

- Failure propagation
- Diagnosis
- Visualization

In failure propagation step we perform the following computation steps:

- select one or more specific failures
- in the BN we set the states of nodes representing the failures to defective
- set the states of the remaining failure nodes that are the root nodes of the BN to the state "non defective"
- determine the state of the remaining nodes using Monte Carlo simulation
 - find the next node in the list of temporally ordered nodes
 - Using BN inference, calculate the posterior distribution of that node given the evidence so far
 - determine the state of the node by Monte Carlo sampling of its posterior distribution
 - stop when states of all nodes have been determined

The failure propagation step is followed by diagnosis step:

- assume the states of all the observation nodes to be those determined in the failure propagation step
- compute posterior probability for all the failure nodes (not only the nodes selected as "defective" in the failure propagation step) given the states of the observation nodes

The first two steps of the algorithm are performed many times for each specific selection of the failures. They amount to selecting failures, obtaining a set of likely observations resulting from the failures and then diagnosing the failures as if only the observations were known. The failures may be selected systematically e.g. each failure node separately, then all pairs of failure nodes etc. or randomly—according to the probability of failure occurrence.

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)		SIGNATURE		DATE		WITNESS NAME (TYPE)		SIGNATURE		DATE	

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

INVENTION DISCLOSURE

THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC



The third step – visualization—is performed when all the computations for the first two steps are completed. There are two outputs produced from the visualization step:

- complete graph for failure probabilities
- 2D and 3D matrices of averaged failure probabilities

The complete graph for our example network is shown in figure 2. To generate this example, we individually set each failure node to “defective” 100 times each. Then we generated a set of likely observations given each failure node, and retrieved the posterior probabilities of each failure given the set of likely observations. In addition, we also set the two most likely pairs of failures (Fuel-in-tank/BatteryCharge and Fuel-in-tank/Fuel Filter) to “defective” simultaneously and generated observations from these pairs. Thus we generated a total of 900 cases. The complete graph provides a pictorial representation of all of these cases: each point on the x-axis of this graph corresponds to a single case, and the y-axis denotes the posterior value for each failure or failure/pair in the network. If a given failure was part of the set of nodes that were set to “defective” in the simulation, then its posterior is shown as a positive (>0) value; whereas, if the failure was not in the faulty set, then it's posterior is shown as a negative value. The cases are ordered from the left of the graph to the right so that the cases for the nodes that are most likely to be defective come first followed by the less likely cases. The gray line indicates the prior probability of each failure or failure pair (scaled as a proportion of the largest prior).

The graph gives one a complete view of what happens when various failures or sets of failures are present. A quick scan of the bottom half of the graph tells us which nodes can be implicated when a particular failure is present. It also gives us specific information about the possible discrete levels that each failure's posterior probability can take, assisting us in deciding about when a failure should be deemed to be present.

In our automobile diagnosis example, we can see immediately that the failures “Fuel Filter” and “Fuel Pump” both very frequently implicate each other, and both occasionally implicate the “Solenoid”, which in turn occasionally implicates each of them. These symmetrical implications are due to the fact that each of these failures have similar observations in the model. All of them can cause the engine to stop working, and “Fuel Filter” and “Fuel Pump” both have an impact on whether fuel gets into the carburetor. One might conclude, based on this graph, that even if our model perfectly reflects reality, we will not be able to distinguish between these three failures unless we add some observations or tests that help us separate them.

One can also see, by looking at the complete graph, that while the “Cable Connections” failure strongly implicates “Battery Charge Level” failure, the converse is not true. This happens because, while again, both of these components impact the model in similar ways, a drained battery is much more likely to occur than a loose cable connection. Thus, when a cable connection is faulty, we immediately assume the battery is dead, but not

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)		SIGNATURE		DATE		WITNESS NAME (TYPE)		SIGNATURE		DATE	

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

INVENTION DISCLOSURE

THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC



the converse. From this information one might conclude that we need to add to our model a strong test to distinguish between these two components e.g. the voltage of the battery.

The 2-D matrix for our example network is shown in figure 3. The 2-D matrix is another, more compact, view of the data generated by the simulation. The x-axis of this figure denotes the failures or pairs of failures that were set to "defective", the y-axis denotes the average posterior probability generated for each failure or pair, given that the failure or pair on the x-axis was set to "defective". The top row of the matrix represents the prior probabilities of occurrence of the failures or pairs. The values are indicated by color, ranging from white (i.e. lowest value) to yellow to red (i.e. the highest value). The 2-D matrix gives us similar information as the complete graph, but it does it in a much more concise representation. Here a quick scan of the off-diagonal elements tells us when a false-failure is likely. A scan of the diagonal elements indicates how well a true failure can be detected. If our model and the domain were perfectly able to distinguish between the failures, then the diagonals for all the single failures might be around 100% and the off-diagonals might be around 0%. If the pairs were perfectly distinguishable, then in addition to the diagonal value being 100%, the off diagonals corresponding to the components that make up the pairs will also be implicated near the 100% level.

In general, we are more concerned about detecting failures that are very likely to be present than those that are unlikely. To reflect this fact, we order the axes of the 2D matrix according to the value of the diagonal elements, so the failures or pairs that are most likely to be correctly identified as "defective" will appear on the left/top of the graph. Thus a quick scan of the top row (the priors row) of the matrix allows you to identify problem targets that have a high probability of being faulty by looking for bright colors near the right side of the matrix. In our example, nodes 7 and 8 ("Fuel Filter" and "Fuel Pump", respectively) have fairly high priors but their diagonal elements lie to the right. Also in our example, we can see the symmetric implications of "Fuel Filter" and "Fuel Pump", and we can see clearly the asymmetric implication of "3. Battery" by "6. Connections". Even the relatively minor implications are evident in this graph, for example, the cross-implication of "7. Fuel Filter", "8. Fuel Pump" and "4. Solenoid".

The conciseness of this representation has the drawback of presenting only average values, so it may not be possible to distinguish between a component that implicates another component many times at a low level (a good situation) versus one that implicates another component fewer times at a high level (less desirable situation). This information must be retrieved from the complete graph.

The 3D matrix for our example network is shown in figure 4. The 3D matrix is very similar to the 2D matrix, only instead of viewing the values using color scale, we present a full-perspective 3-D map of the data. This representation has many of the advantages of the 2D map, but also allows us to get a better feeling for the

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)		SIGNATURE		DATE		WITNESS NAME (TYPE)		SIGNATURE		DATE	

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

relative heights of the levels than is possible with the color scale. The drawback to the 3D matrix is that it can be difficult to interpret with just a single angle of view. It is most effective when it can be rotated and viewed at several angles to see around walls or spikes that might be present in the data.

The software implementation of this method is a Windows executable program written in object-oriented C++ code. The program takes in a BN model file of the decision domain. The file can be in .dsl (i.e. GeNIe), .net (i.e. Hugin) or .dne (i.e. Netica) format. It produces the three graphical representations of the model performance: complete graph, 2-D matrix and 3-D matrix.

[1] Finn V. Jensen "Bayesian Networks and Decision Graphs," Springer Verlag, New York, 2001

B. ATTACH COPIES OF DRAWINGS OR DETAILED REPORTS HELPFUL IN UNDERSTANDING HOW YOUR INVENTION WORKS.

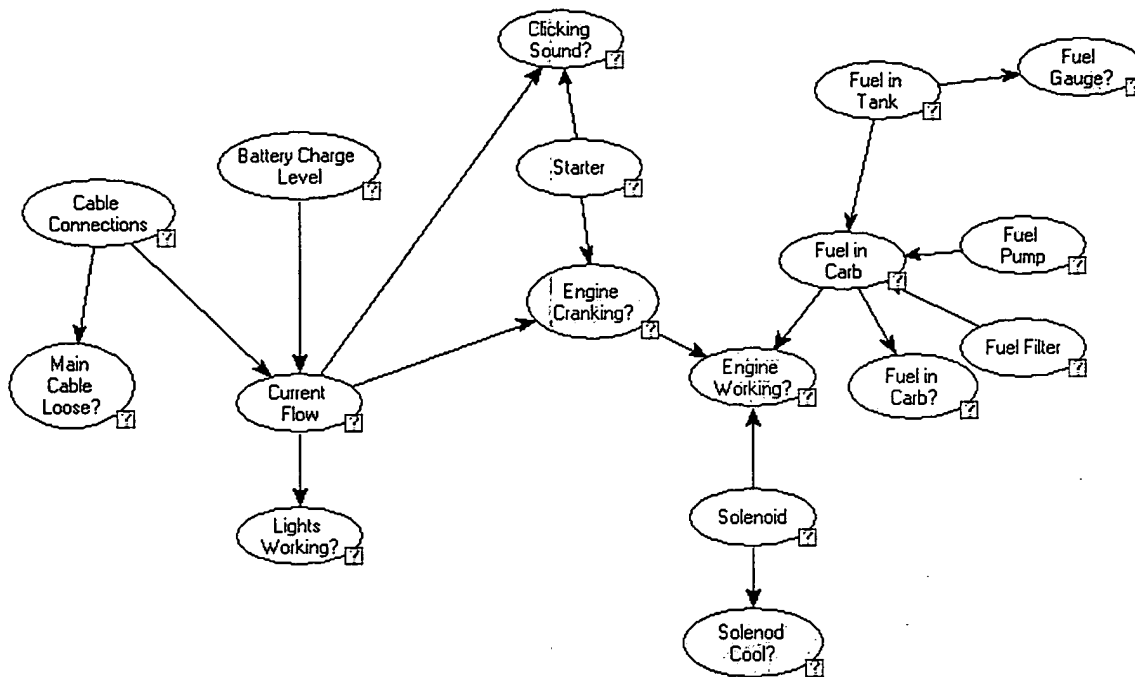


Figure 1. Bayesian Network for Diagnosis of Car Problems.

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE	DATE

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

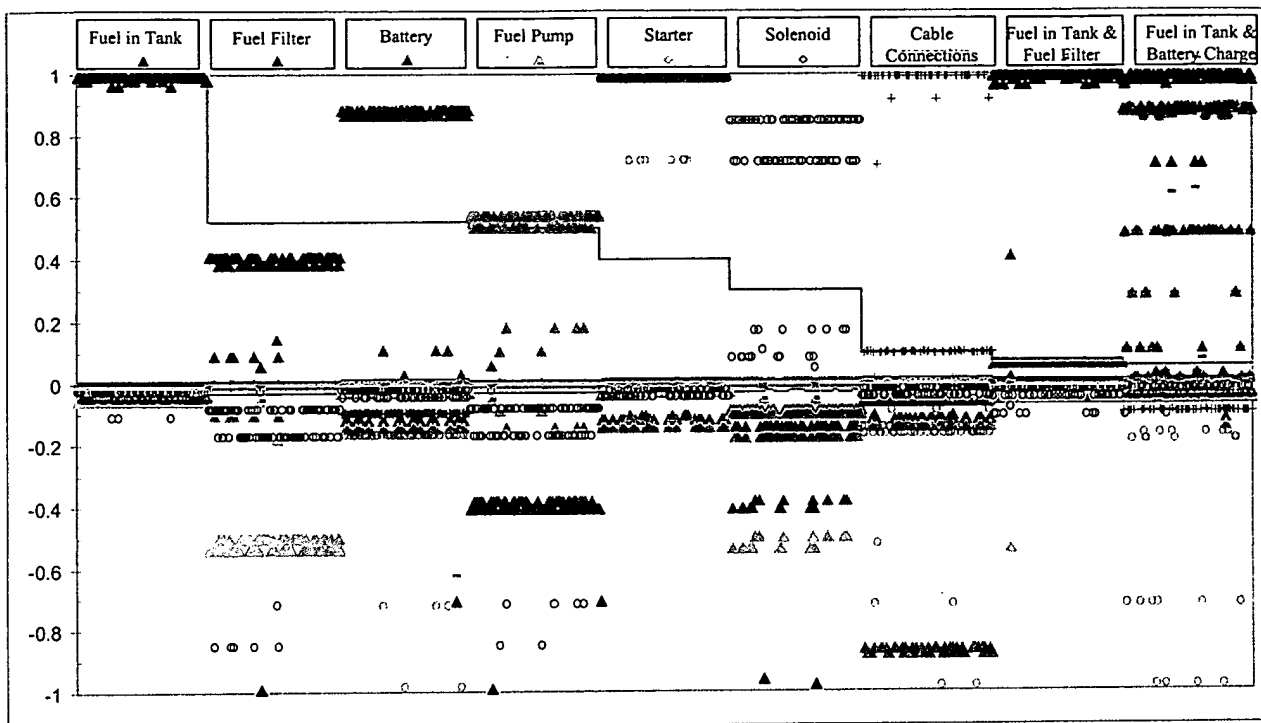
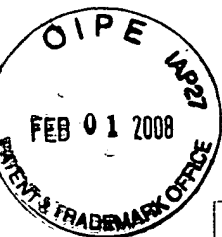


Figure 2. Complete Graph of Failure Diagnoses for BN from Figure 1.

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

				INVENTION DOCKET NO.
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)	SIGNATURE DATE	WITNESS NAME (TYPE)	SIGNATURE DATE

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

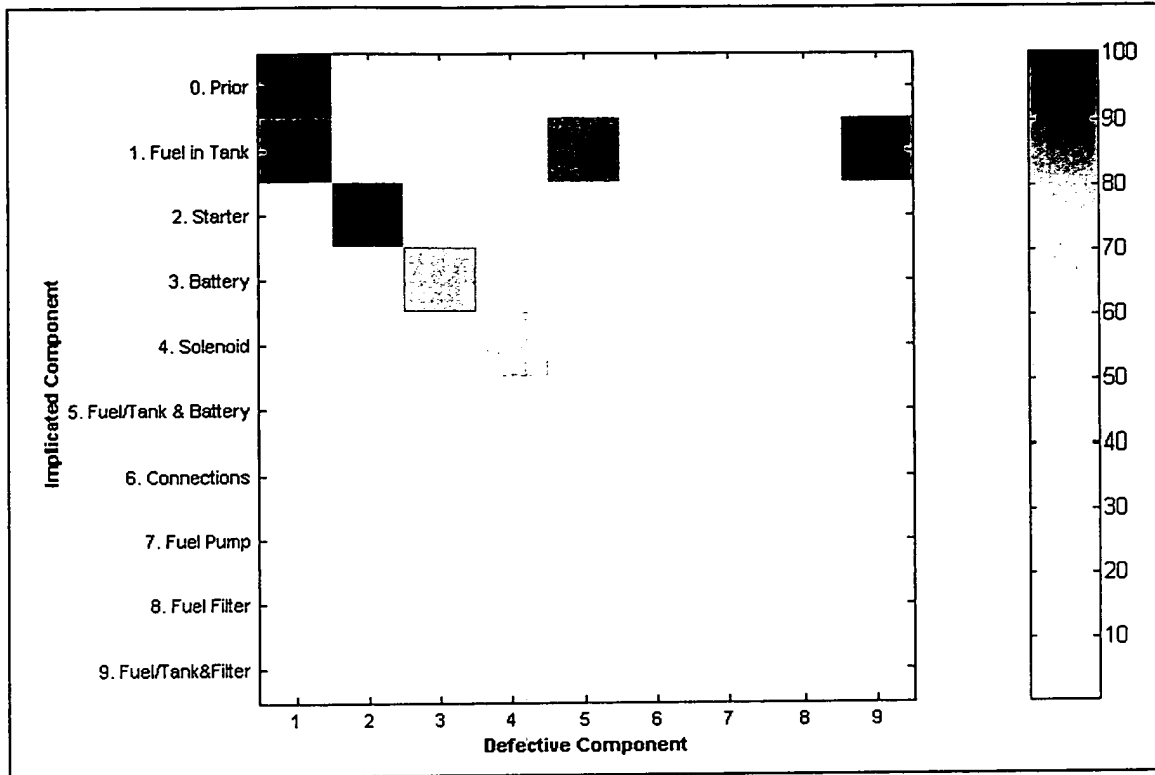


Figure 3. 2-D Matrix of Failure Diagnosis Averages for BN from Figure 1.

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	
SIGNATURE OF INVENTOR		DATE	SIGNATURE OF INVENTOR		DATE	

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE	DATE

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

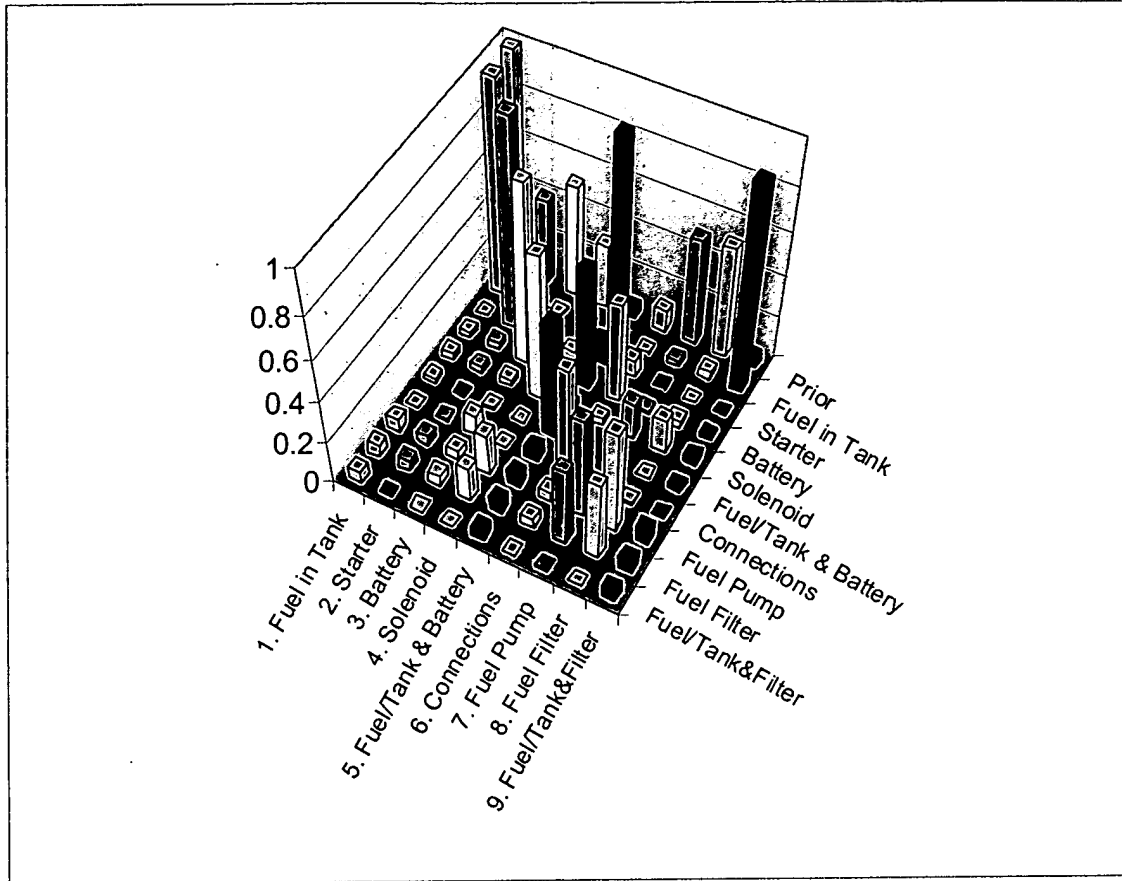


Figure 4. 3-D Matrix of Failure Diagnosis Averages for Bayesian Network from Figure 1.

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

		INVENTION DOCKET NO.	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE	DATE
---------------------	-----------	------	---------------------	-----------	------

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

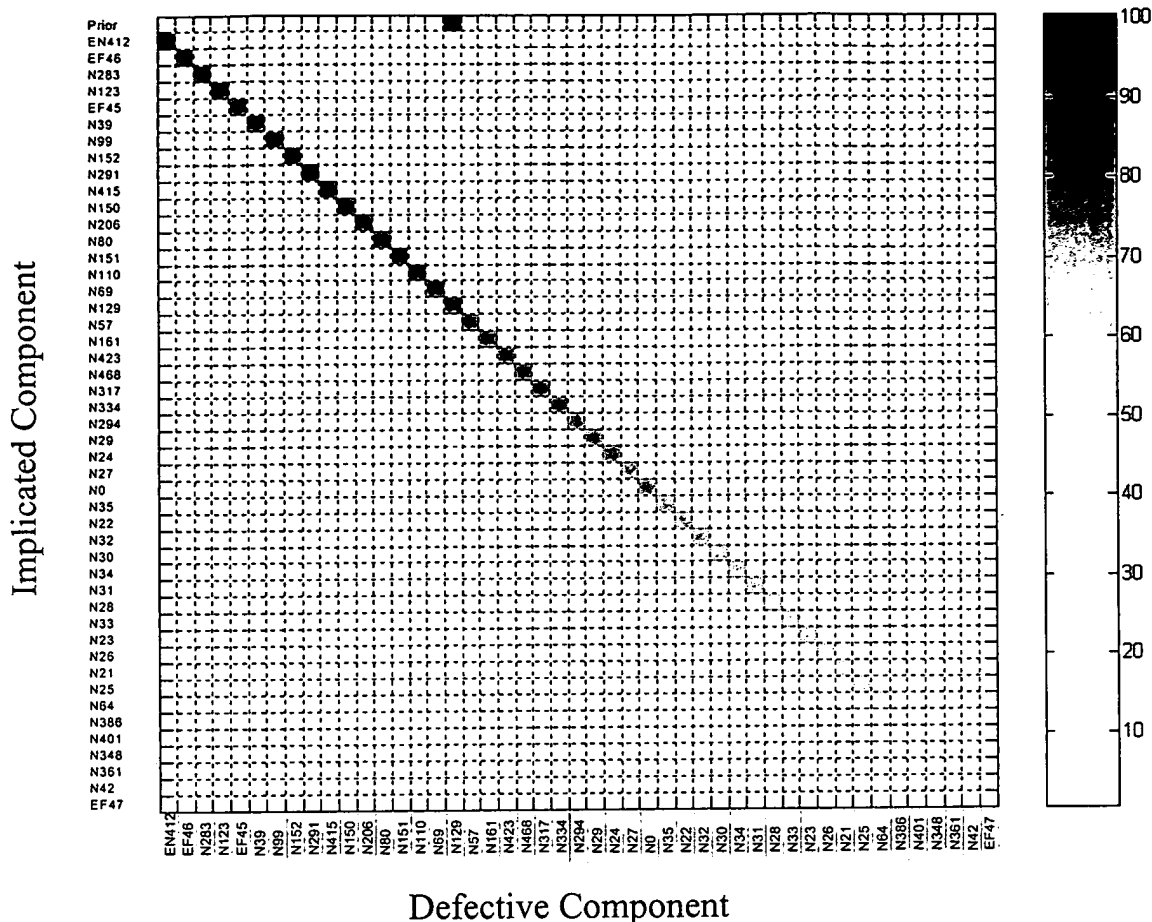


Figure 5. 2-D Matrix for a Large Diagnostic Model #1 – Good Diagnostic Performance

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

		INVENTION DOCKET NO.	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE	DATE
---------------------	-----------	------	---------------------	-----------	------

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

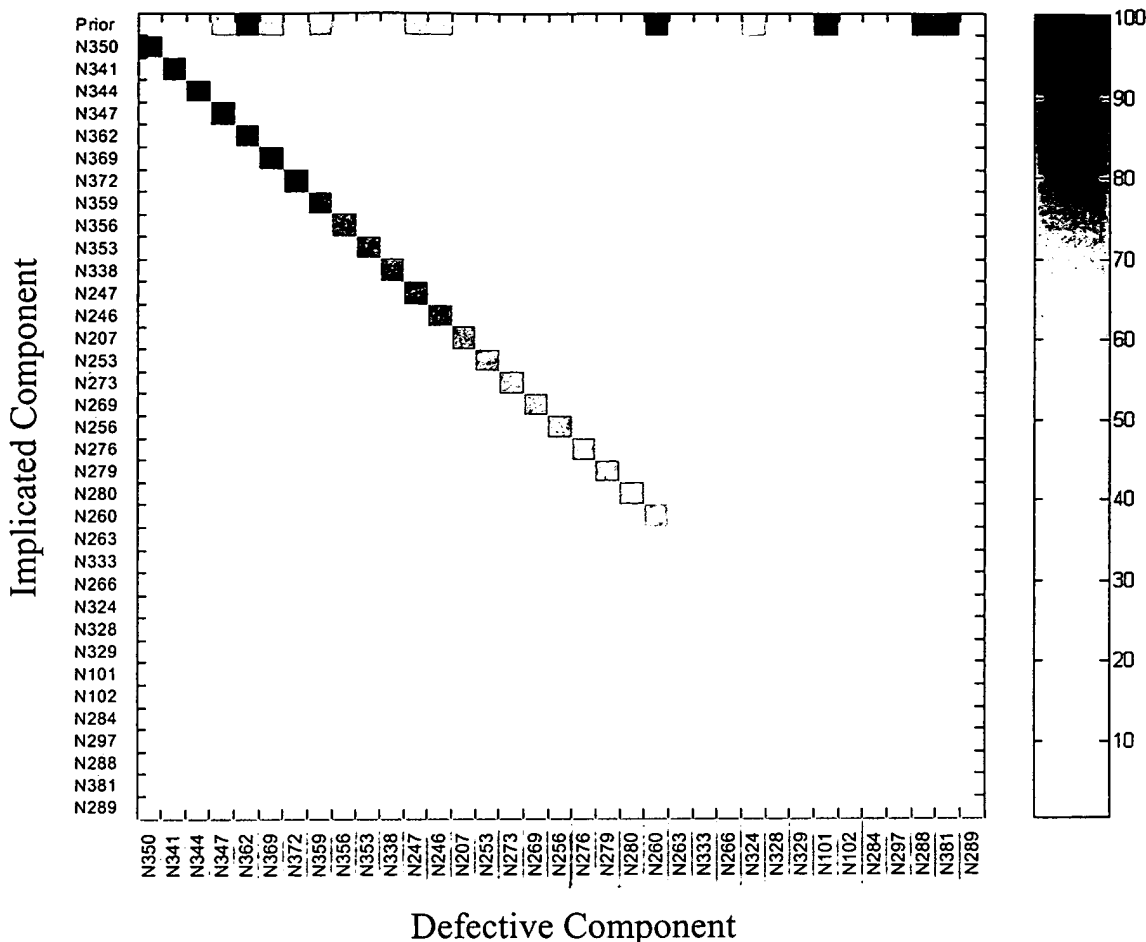


Figure 6. 2-D Matrix for a Large Diagnostic model #2 – Poor Diagnostic Performance

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.


				INVENTION DOCKET NO.
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	
SIGNATURE OF INVENTOR	DATE	SIGNATURE OF INVENTOR	DATE	

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE	DATE	WITNESS NAME (TYPE)	SIGNATURE

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

SEND COMPLETED DISCLOSURE DIRECT TO:
TECHNOLOGY INFORMATION OFFICE
ATTN: Joy Pavlow, MS RL55
HRL LABORATORIES, LLC
Telephone No - 5734

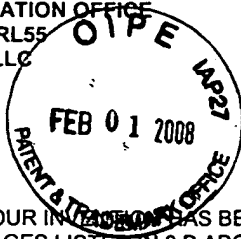

HRL PROPRIETARY AND SENSITIVE
(when completed)
INVENTION DISCLOSURE
THIS INVENTION DISCLOSURE IS MADE PURSUANT TO
MY / OUR OBLIGATIONS TO HRL LABORATORIES, LLC



17 of 17

- C. IF YOUR INVENTION HAS BEEN TESTED, BRIEFLY SUMMARIZE THE TEST RESULTS WHICH CONFIRM THE FUNCTIONS AND ADVANTAGES LISTED IN 8 B ABOVE.

Our method was tested on several small example networks and on two larger networks used in real-life troubleshooting of a large electromechanical system. One of the large models (#1) contained 169 nodes with 47 failure nodes. The other model (#2) contained 98 nodes with 36 failure nodes. The evaluation of these networks, sampling each failure (no pairs) 100 times took about 20 minutes for #1 and about 15 minutes for #2, running on 1.2 MHz_Pentium IV PC.

#1 is an example of a nearly perfect diagnostic model, figure 5. The falsely implicated failures (off-diagonal elements) have average probability much smaller than the true failures (diagonal elements). This evaluation was confirmed by follow-up studies showing that a diagnostic support tool based on #1 model correctly classified records about 95% of the time.

On the other hand, the 2D matrix for #2 model shows a much more complicated picture. The first observation, looking across the top row of priors, is that there are 4 or 5 bright colors near the far right of the graph. These 5 failures are very likely to occur (in fact the top 3 failures are part of this set), and have very low values on the diagonal i.e. are poorly recognized as true failures. To make matters worse, the 3 failures most likely to be defective (N101, N288, and N381) are strongly coupled: they all implicate each other at about the same rate as that they are implicated themselves. It is thus apparent that there is a need for additional tests for these failures. The test must implicate strongly the real failure and must help in separating the failure from other non defective components. This evaluation was verified empirically: The best diagnostic accuracy we could achieve for the model #2 was about 65% .

HRL PROPRIETARY AND SENSITIVE (when completed)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION, AND EXCEPT WITH WRITTEN PERMISSION OF HRL LABORATORIES, LLC, SUCH INFORMATION SHALL NOT BE PUBLISHED, OR DISCLOSED TO OTHERS, OR USED FOR ANY PURPOSE, AND THE DOCUMENT SHALL NOT BE DUPLICATED IN WHOLE OR IN PART. THIS LEGEND SHALL BE APPLIED TO ALL DOCUMENTS CONTAINING THIS INFORMATION.

SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		INVENTION DOCKET NO.
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		
SIGNATURE OF INVENTOR		DATE		SIGNATURE OF INVENTOR		DATE		

READ AND UNDERSTOOD BY:

WITNESS NAME (TYPE)		SIGNATURE		DATE		WITNESS NAME (TYPE)		SIGNATURE		DATE	

(EACH PAGE UPON WHICH INFORMATION IS ENTERED SHOULD BE SIGNED AND WITNESSED)

©2001 HRL Laboratories, LLC. All rights reserved. Rev: 042501.